

 

 
 
 
 
 
 
 
 
 
 
 
 















 


MIDIjet Pro USB Frequency Chart Firmware v.1.4

Setting Number	DIP Switch Positions	Notes
0		"No Binding" mode and "Firmware Update" mode
1		Channel 1 2.407
2		Channel 2 2.409
3		Channel 3 2.411
4		Channel 4 2.413
5		Channel 5 2.415
6		Channel 6 2.417
7		Channel 7 2.419
8		Channel 8 2.421
9		Channel 9 2.423
10		Channel 10 2.425
11		Channel 11 2.427
12		Channel 12 2.429
13		Channel 13 2.431
14		Channel 14 2.433
15		Channel 15 2.437

Setting Number	DIP Switch Positions	Notes
16		Channel 16 - USB Interface Mode (no wireless)
17		Channel 17 2.439
18		Channel 18 2.441
19		Channel 19 2.443
20		Channel 20 2.445
21		Channel 21 2.447
22		Channel 22 2.449
23		Channel 23 2.451
24		Channel 24 2.453
25		Channel 25 2.455
26		Channel 26 2.457
27		Channel 27 2.459
28		Channel 28 2.461
29		Channel 29 2.463
30		Channel 30 2.465
31		"Bind Setup" mode

Legend

 Switch is up

 Switch is down